




HOW TO FIX TOUCH ISSUES

FOR ALL INTERACTIVE PANELS IN
DUAL SCREEN MODE

#1


Turn on your PC and log in.

Make sure your interactive panel
is on and on the right input.

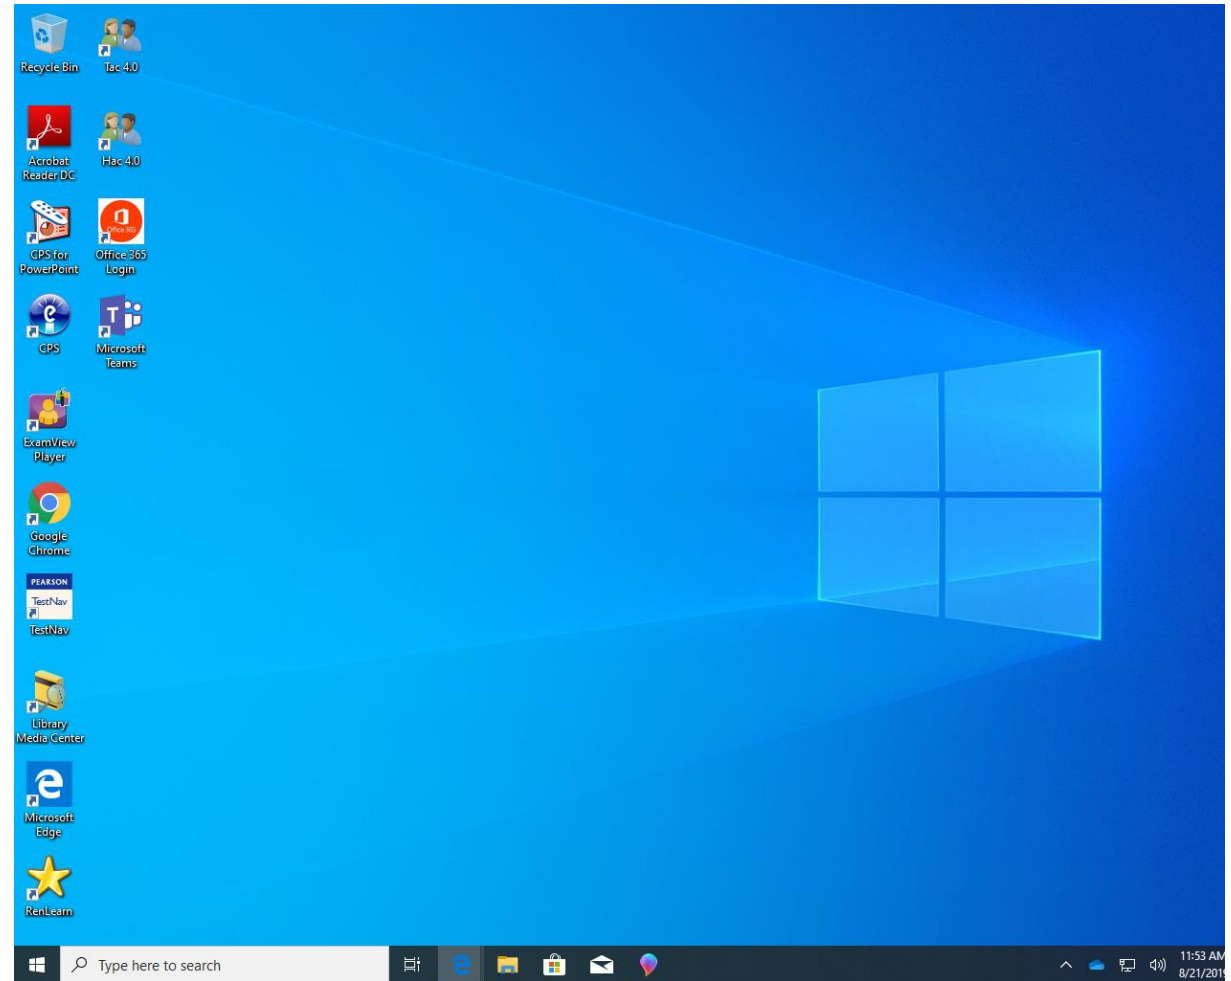

#2


Right click on your desktop and
go to “Display Settings”

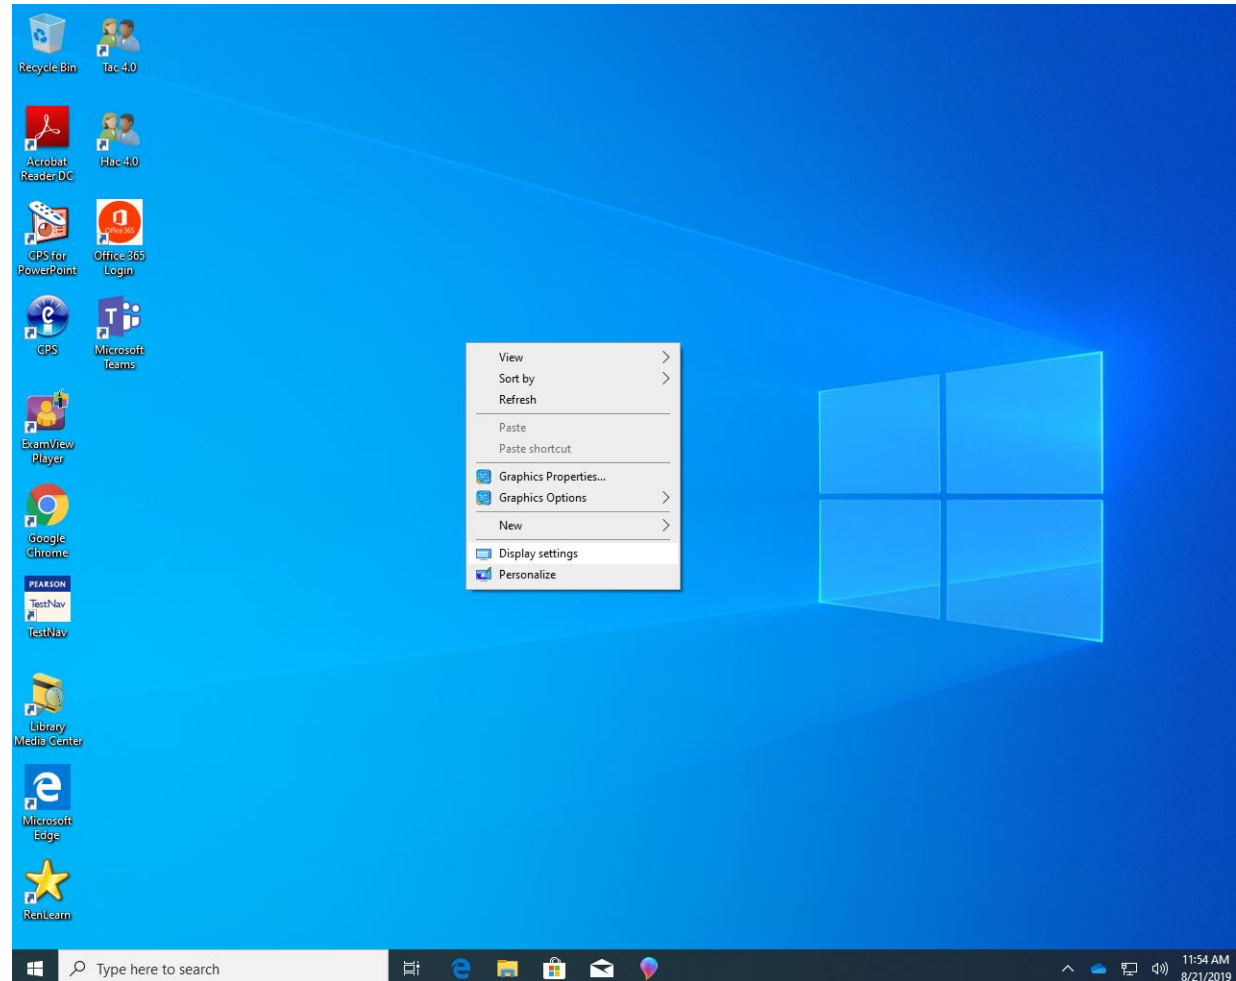

#4

You will now see two displays.

Click on the larger one, that is your interactive panel. Make sure it is highlighted blue.

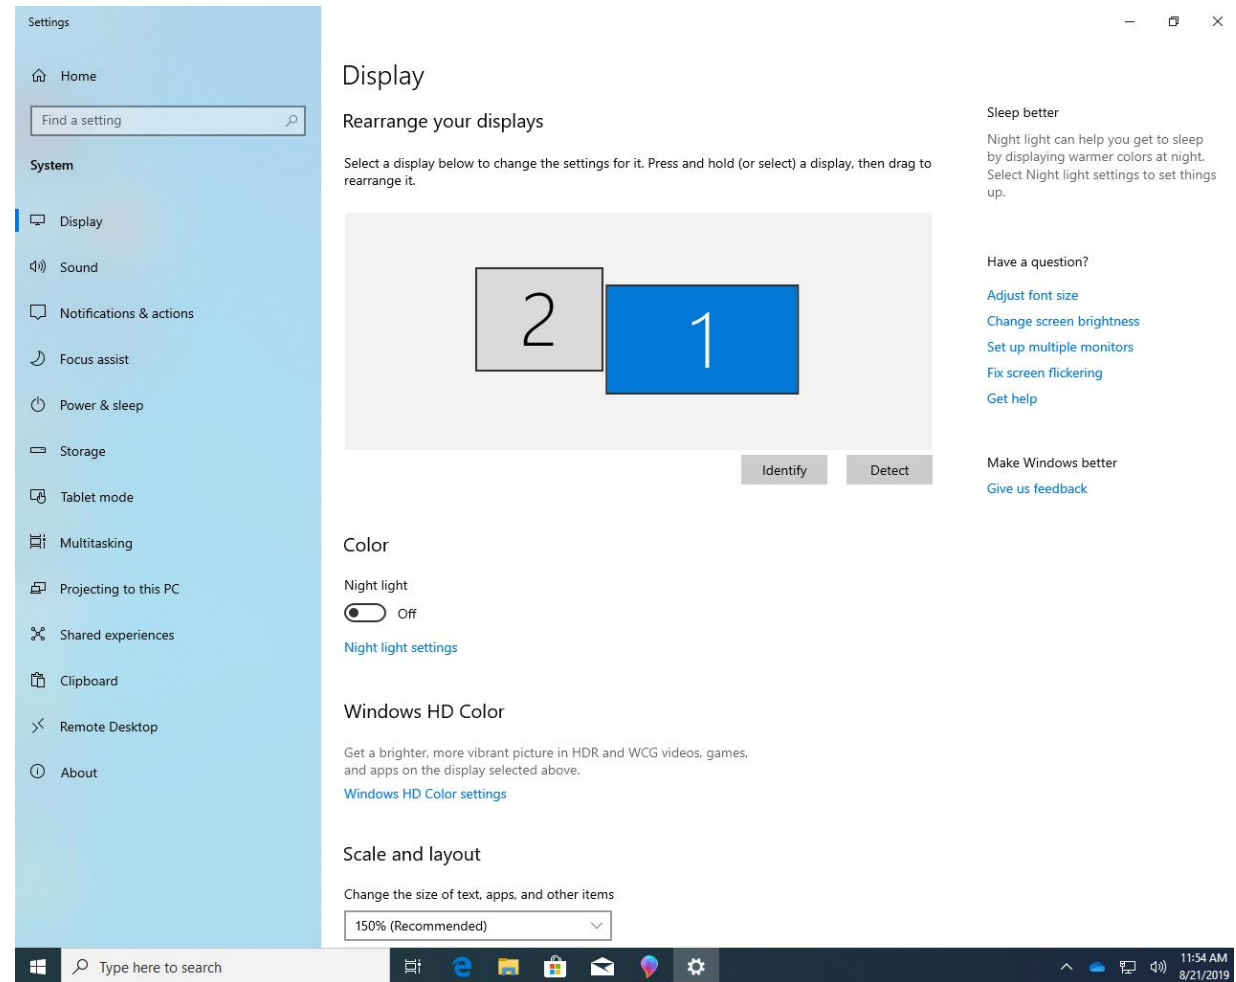

#5

Click on the check box that say
“Make this my main display”

Once this is done, you should
have touch on your main display.

If not, submit a tech request at:
Support.hoxieonline.com

